


amazfit

CHEETAH 2 ULTRA

Package Contents

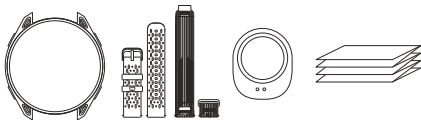


Watch Body

Watch Strap

Charging Puck

Instruction Manual

About the Watch

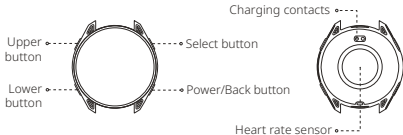

Note: Press and hold the power button to turn on the watch. If the watch cannot be turned on, please charge it and then try again.

Pairing the Watch

Zepp is a must-have app for this watch. It provides scientific sleep and workout guidance and personalized health services to help you start a healthy lifestyle.

1. Use your mobile phone to scan the QR code on the right side to download and install the app, or search for the app in the Google Play Store or Apple App Store and then download and install the latest version of the app.
2. Open the app, register an account and log in.
3. Pair the watch as prompted by the app.




Download Zepp App

Notes:

1. For better user experience, please use the most recent version of the app.
2. The operating system needs to be Android 7.0, iOS 15.0, or above.
3. Do not pair the watch directly using your mobile phone's Bluetooth. Follow the steps in the app to pair your watch correctly.

Charging the Watch

1. Use a Type-C USB cable to connect the charging base to a power adapter or computer. Ensure a secure connection for proper charging.
2. Put the watch into the charging base. Pay attention to the direction and position of the watch, and make sure that the metal contacts on the back of the watch fit closely with the charging base.
3. When charging starts, the watch screen displays the charging progress.

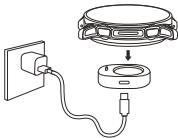


Notes:

1. Please use the charging puck that comes with the watch to charge it. Using other charging puck may affect the charging process. Please ensure the charging puck is dry before charging.
2. To ensure the best charging speed, it is recommended to use a power adapter with a charging current of 1A or above.


Assembling and Disassembling the Watch Strap

1. Take the strap out of the packaging box, ensuring the short strap is on top and the long strap is on the bottom, with the correct orientation.
2. Align the strap pin with the lug hole, insert one end first, then use your finger or a tool to press the spring bar, allowing the other end to snap into the lug hole.
3. After installation, gently pull the strap to ensure it is securely installed.
4. To remove the strap, please refer to the illustration.

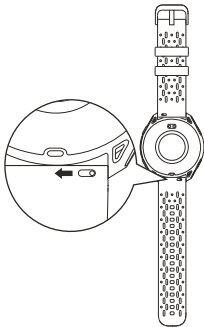

Wearing the Watch

1. To ensure the accuracy of heart rate, blood oxygen, sleep, and other data measurements, wear the device at least one finger away from the wrist bone and keep the strap comfortably snug.
2. For optimal heart rate accuracy during workouts, wear the watch snugly (avoiding wrist movement) and position it at least a finger's width away from your wrist bone. You may slightly loosen the band post-workout for comfort.
3. When measuring blood oxygen saturation, wear the watch correctly. Avoid wearing the watch on the wrist joint, keep your arm flat, maintain comfortable (appropriately tight) fitting between the watch and the skin of your wrist, and keep your arm still throughout the measurement process.

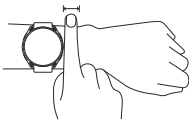

Note:

Factors such as arm sag, arm sway, arm hair, and tattoos can cause measurement inaccuracies.

Basic Parameters

Product name: Smart Watch

Model number: A2441

Input: DC 5 V 1 A MAX

Wi-Fi: 2.4 GHz 802.11 b/g/n

Wi-Fi frequency: 2400–2483.5 MHz

Wi-Fi output power: <18 dBm

Bluetooth version: V5.2

GNSS Frequency Range: 1559-1610MHz (RX); 1164-1215MHz (RX)

View product certification information on the watch's Settings > System > Regulation page.

Device requirements: Devices installed with Android 7.0 or iOS 15.0 or above OS versions

Package Contents: Watch body, 2 Watch straps, Charging puck, Instruction manual

Please refer to the watch user interface to see the software version.

Bluetooth output power: <13 dBm

BLE output power: <10 dBm

Working temperature: 0°C-45°C

Water resistance rating: 5 ATM

Bluetooth frequency: 2400-2483.5 MHz



Bluetooth[®]

The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Anhui Huami

Information Technology Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

Battery Safety

1. This device is equipped with a built-in battery that cannot be removed or replaced. Do not disassemble or modify the battery by yourself.
2. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
3. Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
4. A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
5. Do not use power adapters or data cables that are not properly certified or incompatible, as this may damage the watch and accessories, or cause fire, explosion, or other hazards.

Safety Notice

1. Do not allow children or pets to bite or swallow the product or its accessories, as this may cause injury.
2. Do not place this product under excessively high or low temperatures, which may cause the product to catch fire or explode.
3. Do not place this product near heat sources or open flame, such as ovens and electric heaters.
4. Some people may experience allergic skin reactions to plastics, leathers, fibers, and other materials, and symptoms such as redness, swelling, and inflammation will occur after long-term contact with this product's components. If you experience such symptoms, please discontinue use and consult your doctor.

5. Do not use power adapters or data cables that are not properly certified or incompatible, as this may damage the watch and accessories, or cause fire, explosion, or other hazards.
6. The radio waves generated by this product may affect the normal operation of implanted medical devices or personal medical devices, such as pacemakers and hearing aids. If you use any such medical devices, consult the manufacturer for relevant usage restrictions.
7. Do not dispose of this device or its accessories as ordinary household waste. Please make sure you dispose of or recycle this device and its accessories in accordance with local laws and regulations.

Repair and Maintenance

1. Avoid using detergents such as soap, hand sanitizer, bath foam, or lotion for cleaning to prevent chemical residues from irritating the skin, corroding the device, or degrading the water resistance of the device. If accidentally contacted, immediately rinse with clean water, soak for 30 minutes, then remove and dry the device with a clean soft cloth.
2. After wearing the device while bathing (for devices that support bathing), swimming (for devices that support swimming), or sweating, please promptly clean and dry the device.
3. After prolonged wearing, it is recommended to use a soft cloth dipped in clean water to clean the charging contacts, to avoid sweat, sebum, and dirt affecting charging performance.
4. When using light-colored watch straps, avoid contact with dark clothing to prevent staining.

5. The watch cannot be used in snorkeling, showering, hot spring bathing, saunas (steam rooms), diving, scuba diving, water skiing, and other water-related and deep-water activities involving high-speed water flow. After the watch comes into contact with seawater, please rinse the surface holes or interfaces with fresh water to prevent the crystallization of residual seawater, which could affect the normal use of the watch.
6. Do not place the device in direct sunlight for long periods. Excessively high or low ambient temperature may cause device failure.
7. Handle with care during transportation. Keep the device dry and away from humidity.
8. Do not wear the watch in MRI examinations and other highly magnetic environments. Otherwise, the watch may be damaged.

Warranty and Return Policy

The Amazfit Limited Warranty covers Amazfit products against manufacturing defects beginning on the original purchase date. The warranty period is 12 months or another specified period as the applicable consumer laws in the consumer's country of purchase require. Our warranty is in addition to rights provided by applicable consumer laws.

Official website: www.amazfit.com

Please check the FAQ on the website for troubleshooting:
support.amazfit.com/en/product-list

Notes:

- This product isn't a medical device. None of the data or measurements are intended for medical diagnosis or medical monitoring.
- If the product is not in use for a long period of time, it is recommended that you power off the product before storing it. Recharge the battery every 6 months to 100% to prevent battery damage by over-discharge due to long-term storage.